


## Installation II Menu

To access the **Installation II** menu and adjust the settings, perform the following steps:

1. Enter the **OSD** menu.
2. Press the ◀ or ▶ button to select the **Installation II** menu.
3. Press the ▲ or ▼ button to move the cursor up or down in the **Installation II** menu.

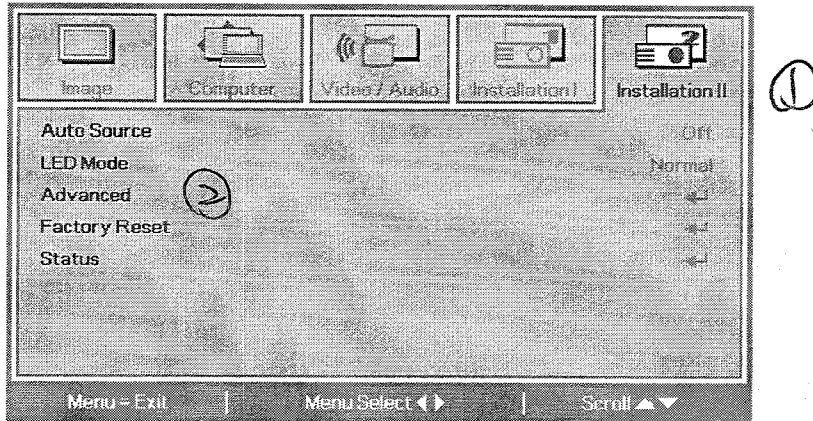


ITEM	DESCRIPTION
Auto Source	Press the ◀ or ▶ button to enable or disable automatic source detection.
LED Mode	Press the ◀ or ▶ button to select the LED mode for higher brightness or lower brightness to save LED life.
Advanced	Press ← to enter the Advanced menu. See <i>Advanced Feature</i> on page 32.
Factory Reset	Press ← to reset all items to factory preset values.
Status	Press ← to enter the Status menu. See page 35 for more information on Status.

## Advanced Feature

To access the **Advanced** menu and adjust the settings, perform the following steps:

1. Enter the **OSD** menu.
2. Press the ◀ or ▶ button to select the **Installation II** menu.
3. Press the ▲ or ▼ button to select the **Advanced** menu and then press ←.
4. Press the ▲ or ▼ button to move the cursor up or down in the **Advanced** menu.
5. Press the ◀ or ▶ button to change values for each applicable setting.

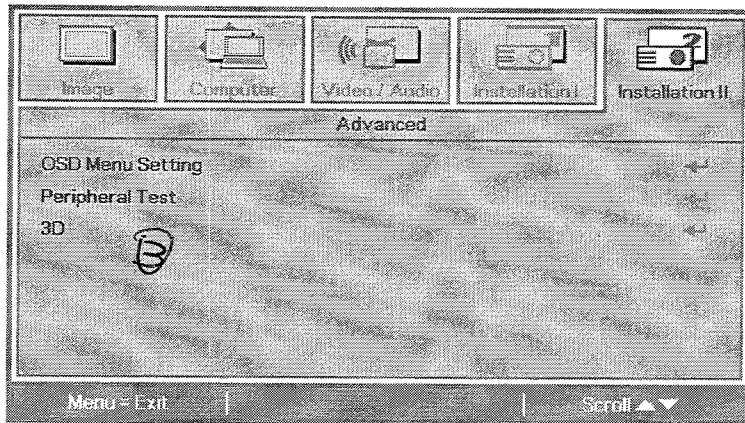

ITEM	DESCRIPTION
OSD Menu Setting	Press ← to enter the OSD setting menu. See page 33 for more information on OSD Menu Setting.
Peripheral Test	Press ← to enter the Peripheral Test menu. See page 33 for more information on Peripheral Test.
3D	Press ← to enter the 3D menu. See 3D on page 34.

**Note:**

3D functionality works when the input source supports 120Hz.

④ Set to DLP-Link

試試看，如果不行的話，這一台投影機  
就沒支援 60 Hz 3D 功能

# OSD Sub-Menu Overview

